



## User Manual TIMERS TA030 and TA040

1. When the voltage is applied, on the main screen (1) will appers STOP and on the screen nr 2 the last set time. The clock allows to set up 10 programs in the memory.
2. To change the time press for 3 seconds the START button. At first step choose the program to change (1 to 10). After moving the cursor to the appropriate program press START button.
3. On the main screen, at the hours position, will flash: »02«.05. By cursors ↑ (up) and ↓ (down) set the required number of hours. Next press for a moment the START button, at the minutes position will flash: 02.»05«.
- By cursors ↑ (up) and ↓ (down) set the required number of minutes, then confirm the value by pressing START button. The set time will be automatically saved in the memory.
4. To run the machine press START button. Then the red LED (3) will flash between hours and minutes 02».«05.
5. To correct the set time, during the work, press STOP button – the machine will stop – correct the time in the same way as in point 2 and 3.
6. To stop the machine for a moment press START button, to run the machine also press START button.
7. Pressing STOP button during the work will stop the machine and also restart the set time. The operation may be performed many times during the work.
8. After the set time end the main screen will show STOP.
9. In case of power failure the machine will stop. When the machine power is restored the clock will start automatically and count down the remaining time.
10. When the machine is equipped with an inverter the 2 errors may apper:

ER1 – clock error

ER2 – inverter error

In both cases the machine must be disconnect from the power. Then the error should be removed and the machine could start again.



- 1. The main screen
- 2. Number of program
- 3. LED diode
- 4. Cursor UP
- 5. Cursor DOWN
- 6. STOP button
- 7. START button